



780.897.5869
BURKECALIBRATION.COM

NUFLO Liquid Turbine Flow Meter User Manual

Questions? Call us at 780-897-5869 or email info@burkecalibration.com

Table of Contents

Description.....	5
Safety Precautions	7
Pipe/End Connection Installation.....	7
Flowmeter Installation.....	7
Electrical Installation.....	9
Flowmeter Maintenance	9
Disassembling the Flowmeter	9
Reassembling the Flowmeter	10
Specifications and Parts List	11
Table 1—Temperature/Pressure Ratings for Flanged-End Flowmeters	11
Table 2—Linear Flow Range.....	12
Compliances	12
Replacement Kits.....	13
Table 3—Replacement Kits.....	13
Troubleshooting Tips	14
Table 4—Troubleshooting Tips.....	14
Warranty—Limitation of Liability	15

Description

The NuFlo™ Liquid Turbine Flowmeter (Figure 1) is a rugged versatile sensor capable of handling a wide variety of liquids including many types of slurries and suspensions. The flowmeter contains a rotor secured to a tungsten carbide shaft. The shaft is supported at each end in tungsten carbide bearings. The rotor is made of a magnetic material, while the flowmeter body is non-magnetic. A magnetic pickup consisting of a magnet and coil is mounted externally in the body in the same plane as the rotor. Fluid moving through the flowmeter causes the rotor to rotate at a speed proportional to the fluid velocity. The rotor blades cutting the magnetic field in the vicinity of the magnetic pickup create a frequency signal proportional to the fluid velocity. This signal is used to represent flow rate and can be accumulated to totalize the volume of liquid through the flowmeter.

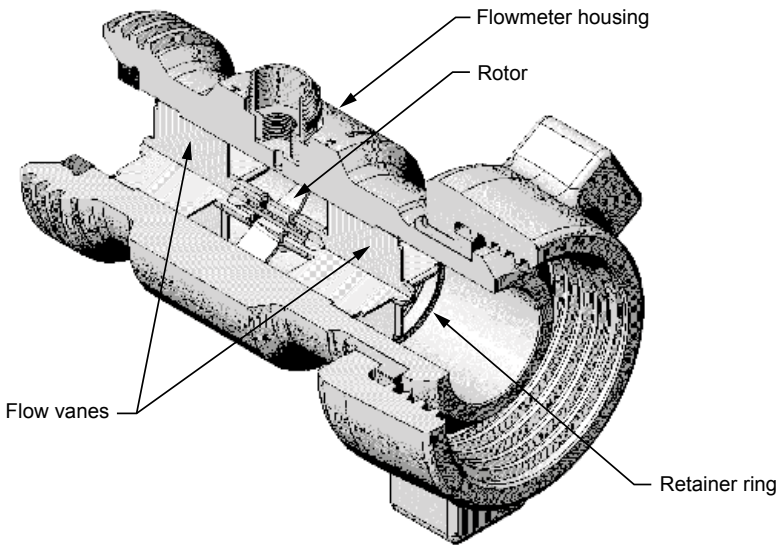


Figure 1—Nomenclature

For easy reference, the meter specifications to include part number, serial number, maximum working pressure, and minimum/maximum operating temperature are imprinted on a stainless steel tag (Figure 2, page 6) or engraved on the meter body (Figure 3, page 6). Meters with a working pressure up to 7500 are marked with a CSA single seal rating.

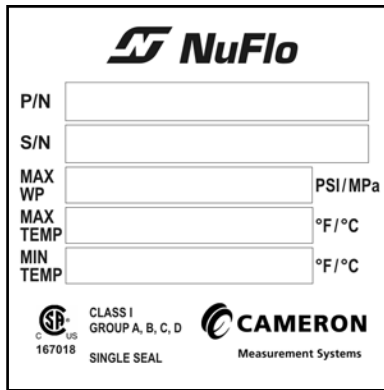


Figure 2—Product identification tag on flowmeter body

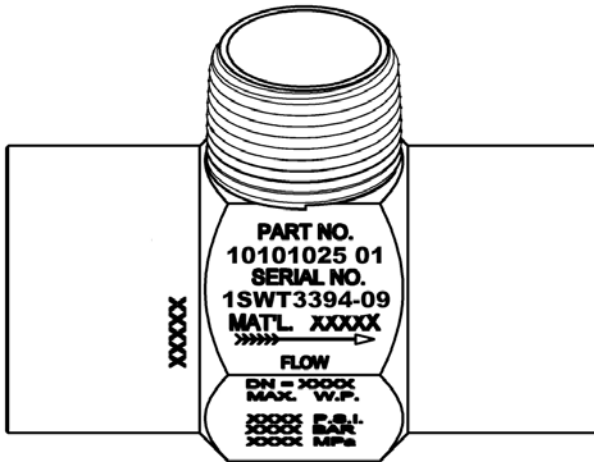


Figure 3—Product identification engraved on flowmeter body (shown on hex body)

Each flowmeter is furnished with a calibration factor representing the number of pulses per gallon produced during the calibration process. Precalibrated rotor and vane kits are available for field replacement (see Table 3, page 13). Meters and kits are available in industrial grade with a linearity of $\pm 0.5\%$ or standard grade with a linearity of $\pm 1\%$.

Note: 3/8" meters and kits are furnished as $\pm 1\%$ linearity for industrial grade and $\pm 2\%$ linearity for standard grade.

Safety Precautions

Always observe the following precautions when installing or operating the flowmeter:

- Clean all upstream lines before installing the flowmeter.
- Do not blow out lines with compressed air or gas after the meter is installed.
- Do not slug the flowmeter with fluid. Initial filling of line with fluid should be done with care.
- Do not exceed maximum recommended flow rates through the flowmeter (Table 2, page 12).
- Do not exceed the meter's maximum working pressure.
- Avoid hammer blows or other sharp impacts on the flowmeter; it may break the shaft.
- If the end connection leaks at the time of installation, remove pressure before attempting to seal.
- The customer is responsible for ensuring chemical compatibility between the meter materials and any fluids being metered.
- The meter will retain the temperature of the fluid. Use caution when touching the meter body.

Pipe/End Connection Installation

A straight section of pipe with required end connections should be installed on either side of the intended meter's location prior to installing the meter. This pipe must be the same nominal pipe size as the meter with a length of at least 10 pipe diameters upstream and 5 pipe diameters downstream. (For example, a flowmeter with a 2-in. nominal diameter requires a 2-in. pipe. The section of straight pipe upstream must be 20 in.; the section downstream must be 10 in.)


Important: Do not install throttling valves upstream of the flowmeter.

Flowmeter Installation

Install the NuFlo™ Liquid Turbine Flowmeter as follows. The flowmeter may be installed in any orientation (vertical, horizontal, etc.).

1. Align the meter bore with the pipe, ensuring that the direction of flow corresponds with the direction of the arrow engraved on the meter body.

2. Attach the meter to the end connections provided using customer-supplied hardware and tighten to form a leak-proof seal:
 - For an NPT threaded meter, apply an appropriate sealant to the meter threads, screw the meter into the threaded pipe connection, and tighten. Avoid the use of Teflon[®] tape on body threads. Strands can enter the flowstream and collect on the rotor, causing measurement error.
 - For a flanged meter, install a gasket between the meter flange and the pipe flange, install studs and nuts, and tighten the nuts evenly to the gasket manufacturer's specifications.
 - For a WECO[®] 1502 union meter, using caution, tighten the hammer union nuts. Do not strike the meter, as impact to the side of the meter can damage the internals.
 - For a grooved meter, install the seal and clamp per manufacturer instructions.
3. Install the magnetic pickup (Figure 4) as follows:
 - a. Screw the magnetic pickup clockwise into the conduit adapter until finger-tight. Then rotate the pickup counter-clockwise one quarter turn. Do not tighten with pliers.
 - b. Turn the jam nut clockwise until the pickup is secure. A $\frac{3}{4}$ -in. 12-point deep thin wall socket wrench (Part No. 9A-100013146) is required.

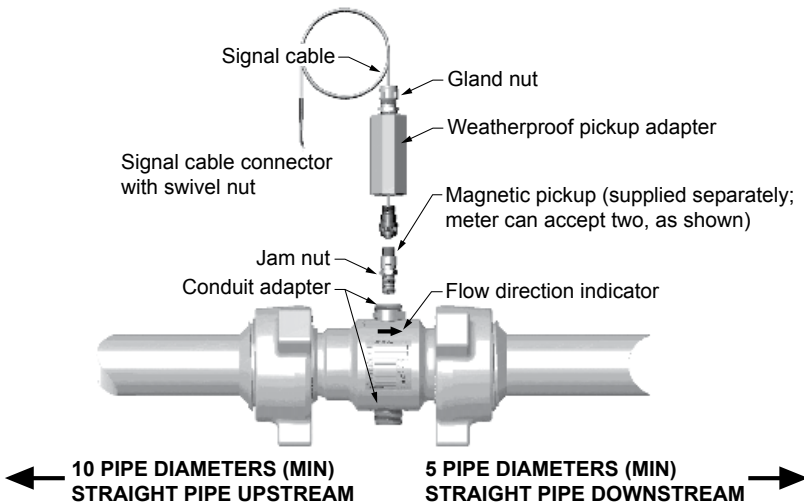

NOTE: Pipe must be of same nominal size as flowmeter end connection.

Figure 4—General flowmeter installation diagram

- c. Attach the signal cable connector to the pickup and turn the swivel nut until the connection is snug. Do not over-tighten.
- d. Loosen the gland nut so that the weatherproof pickup adapter rotates freely without twisting the signal cable.
- e. Slip the weatherproof pickup adapter over the pickup and tighten.
- f. Tighten the gland nut until the rubber grommet seals around the signal cable.

Electrical Installation

Where possible, minimize the length of signal transmission cables from the pickup. The signal from the turbine is a low-voltage AC sine wave that can be as low as 30mV peak-to-peak. Electrical noise on the wires will cause false counts on the readout instruments. Direct-mounting a totalizer or preamplifier is preferred. If this is not possible, ensure that the signal cable is not near power cables, other signal cables, or routed where electrical noise may interfere with signal transmission.

Follow common wiring installation practices, using quality cable (twisted pair, shielded with ground wire).

Flowmeter Maintenance

The flowmeter may be disassembled for inspection, cleaning or repair.

Important: If the meter internals are damaged, always replace the entire kit (Table 3, page 13). Never exchange only the damaged piece. The kits are provided as a calibrated set of components. Accuracy will be sacrificed by replacing just individual parts.

Disassembling the Flowmeter

1. Screw the magnetic pickup out of the meter body to avoid damage during handling of the meter.
2. Remove the retainer ring from one end of the meter body.
3. Slide the vane from the meter body.

Note: Some slotted meters may require a slight twist of the vane to align the vane with the slot in the meter body. If the vane is stuck, insert a brass rod through the opposite vane and through the rotor and drive the vane out by tapping on alternate blades.

4. Remove the rotor. Handle it with care to prevent damage to the rotor shaft.

5. Remove the retainer ring from the other end of the meter body.
6. Remove the second vane.
7. Do not attempt to remove the bearings and thrust balls from the vanes.
8. Clean all parts with a solvent suitable for removing the material that has flowed through the meter. A cotton swab is very useful for cleaning the inside diameter of the bearings.

Reassembling the Flowmeter

The meter is assembled in the following manner:

1. Note that the arrows that are cast or engraved on each part, indicating the direction of flow. When the meter is assembled, these arrowheads and the arrow engraved on the meter body (see flow direction indicator in Figure 4, page 8) must point in the direction that product will flow through the meter.
2. Note that one of the blades on each vane has an arrow on it. Also note that retainer pins or notches are provided at each end of the meter body. The marked blade must be inserted between these retainer pins or notches that are opposite the conduit adapter (or on the bottom of the meter body). The meters are calibrated in this position, and should be reassembled in this position for the greatest accuracy.
3. Insert one of the vane assemblies in the meter body bore, taking care to orient the flow direction arrows correctly. The vane should fit snugly but should not require excessive force to install. Install the retainer ring.
4. Install the rotor, being careful to properly orient the direction arrow on the rotor. Care should be taken to avoid chipping the tungsten carbide rotor shaft.
5. Insert the second vane assembly. If this vane does not fall into position when placed in the meter body, rotate the rotor, if possible, to align the bearing and rotor shaft. Do not attempt to drive the vane in, as this will result in a broken rotor shaft. Install the retainer ring.
6. Spin the rotor by hand, making sure that the rotor moves freely. If the rotor will not turn or stops abruptly, the meter should be disassembled and checked.
7. The meter is now ready for installation. Follow the flowmeter installation procedure as described on pages 7 through 9.

Specifications and Parts List

Table 1—Temperature/Pressure Ratings for Flanged-End Flowmeters

Flange Classification	150		300		600	
	Carbon	Stainless	Carbon	Stainless	Carbon	Stainless
Flange Material						
Design-Operating Temperature Range	Maximum Working Pressure psi (mPa)					
-20 to 100°F (-28.8 to 37.7°C)	285 (1.96)	275 (1.89)	740 (5.1)	720 (4.96)	1480 (10.2)	1440 (9.92)
-20 to 200°F (-28.8 to 93.3°C)	260 (1.79)	235 (1.62)	680 (4.69)	600 (4.14)	1360 (9.38)	1200 (8.27)
-20 to 400°F (-28.8 to 204.4°C)	200 (1.38)	195 (1.34)	635 (4.38)	495 (3.41)	1265 (8.72)	995 (6.86)
-20 to 450°F (-28.8 to 232°C)	185 (1.28)	183 (1.26)	620 (4.27)	480 (3.31)	1235 (8.52)	963 (6.64)

Flange Classification	900		1500		2500	
	Carbon	Stainless	Carbon	Stainless	Carbon	Stainless
Flange Material						
Design-Operating Temperature Range	Maximum Working Pressure psi (mPa)					
-20 to 100°F (-28.8 to 37.7°C)	2220 (15.3)	2160 (14.9)	3705 (25.5)	3600 (24.8)	6170 (42.5)	6000 (41.3)
-20 to 200°F (-28.8 to 93.3°C)	2035 (14.03)	1800 (12.41)	3395 (23.4)	3000 (20.68)	5655 (38.99)	5000 (34.47)
-20 to 400°F (-28.8 to 204.4°C)	1900 (13.1)	1490 (10.27)	3170 (21.8)	2485 (17.13)	5280 (36.4)	4140 (28.54)
-20 to 450°F (-28.8 to 232°C)	1855 (12.79)	1443 (9.95)	3093 (21.33)	2408 (16.60)	5153 (35.53)	4010 (27.65)

Table 2—Linear Flow Range^{1,2,3}

Flowmeter Size see note 3 in. (mm)	GPM	M ³ /hr	BPD	Nominal Cal. Factor see note 2 pulses/gal (pulses x 1000/m ³)	Max. Output Frequency pulses/sec	ΔP at Max. Flow see note 2 psi (kPa)
3/8 (10)	.3 - 3	0.068 - 0.68	10-100	22000 (5812)	1100	4.0 (28)
1/2 (13)	0.75 - 7.5	0.17 - 1.70	25-250	14500 (3830)	1815	12.0 (83)
3/4 (19)	2 - 15	0.45 - 3.41	68-515	2950 (780)	740	18.0 (124)
7/8 (22)	3 - 30	0.68 - 6.81	100 -1000	2350 (621)	1175	20.0 (138)
1 (25)	5 - 50	1 .14 - 11.36	170-1700	900 (238)	750	20.0 (138)
1 ½ (38)	15 - 180	3.41 - 40.88	515-6000	325 (86)	975	16.0 (110)
2 (51)	40 - 400	9.09 - 90.85	1300-13000	55 (14.5)	365	22.0 (152)
3 (76)	80 - 800	18.16-181.66	2750-27500	57 (15.2)	760	20.0 (138)
4 (102)	100 - 1200	22.71 - 272.55	3400-41000	30 (7.9)	600	10.0 (69)
8 (203)	350 - 3500	79.49 - 794.94	12000-120000	3 (.8)	175	6.0 (41)

1. The linear flow range of non-lubricating liquids is limited to the upper 60% of rating.
2. Based on water.
3. Consult Cameron's Measurement Systems Division for assistance with applications involving liquids of viscosities greater than 5 centistokes on 3/8 in. through 3/4 in. meters.

Compliances

- CSA Certified for Hazardous Areas, Class I, Div. 1, Groups A, B, C, D
- Meters with maximum working pressures below 7500 psi are compliant with ANSI 12.27.01-2003 Single Seal.
- Certified by Cameron in compliance with pre-qualified materials of NACE MR0175/ISO 15156. This certification does not imply or warrant the application of the product in compliance with NACE MR0175/ISO 15156 service conditions in which the customer/user installs the product.

Replacement Kits

Each replacement kit contains a rotor, two vane assemblies, two retainer rings, and a calibration tag. All components are calibrated as a set and should be installed as a set. Components should not be installed individually.

Table 3—Replacement Kits

Meter Kit Size (in.)	Standard Grade Part No.	Industrial Grade Part No.
3/8	9A-100003521	9A-100003378
1/2	9A-100003531	9A-100003379
3/4	9A-100003449	9A-100003380
7/8	9A-100005124	9A-100061059
1	9A-100003527	9A-100003381
1-1/2	9A-100003469	9A-100003382
2	9A-100003474	9A-100003383
3	9A-100003470	9A-100061056
4	9A-100003473	9A-100003384
6	9A-100003471	9A-100061057
8	9A-100003472	9A-100061058

CAUTION: Do not install a Standard Grade kit in an Industrial Grade flowmeter. Doing so will void the Industrial Grade linearity of the flowmeter.

Troubleshooting Tips

Turbine meter system malfunctions are usually electrical/electronic, or mechanical in nature.

When a malfunction occurs, check the electrical/electronic systems in accordance with the manufacturer's recommended procedures first. If the source of the malfunction cannot be found in the electrical or electronic systems, inspect the turbine meter.

Table 4—Troubleshooting Tips

Symptom	Possible Cause	Corrective Action
Erratic output	Sensitivity, noise, or foreign material disturbing the fluid profile through the meter.	Verify proper sensitivity setting of electronic read-out instrument; remove intermittent noise signals; remove meter from the line and inspect flow straighteners for foreign material; inspect the rotor for broken blades; check meter run for proper length of upstream and downstream straight pipe installation (see page 7).
No output	Wrong or poor electrical cable connections.	Check connections, correct as necessary.
	No flow.	Verify flow through pipe.
	Defective pickup coil.	Remove and check the pickup coil for continuity between the pins, replace if defective.
	Frozen rotor.	Remove meter from the line and check the rotor for free-spin. If the rotor does not spin, disassemble the meter and clean or replace the components (see Replacement Kits, page 13).

Warranty—Limitation of Liability

WARRANTY - LIMITATION OF LIABILITY: Seller warrants only title to the products, software, supplies and materials and that, except as to software, the same are free from defects in workmanship and materials for a period of one (1) year from the date of delivery. Seller does not warranty that software is free from error or that software will run in an uninterrupted fashion. Seller provides all software "as is". THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, FITNESS OR OTHERWISE WHICH EXTEND BEYOND THOSE STATED IN THE IMMEDIATELY PRECEDING SENTENCE. Seller's liability and Buyer's exclusive remedy in any case of action (whether in contract, tort, breach of warranty or otherwise) arising out of the sale or use of any products, software, supplies, or materials is expressly limited to the replacement of such products, software, supplies, or materials on their return to Seller or, at Seller's option, to the allowance to the customer of credit for the cost of such items. In no event shall Seller be liable for special, incidental, indirect, punitive or consequential damages. Seller does not warrant in any way products, software, supplies and materials not manufactured by Seller, and such will be sold only with the warranties that are given by the manufacturer thereof. Seller will pass only through to its purchaser of such items the warranty granted to it by the manufacturer.